



注意: JM420T最多只有两路报警输出,后两路报警设置无效